AERO-K FIRE SUPPRESSION
Generic Layout and Wiring Connections

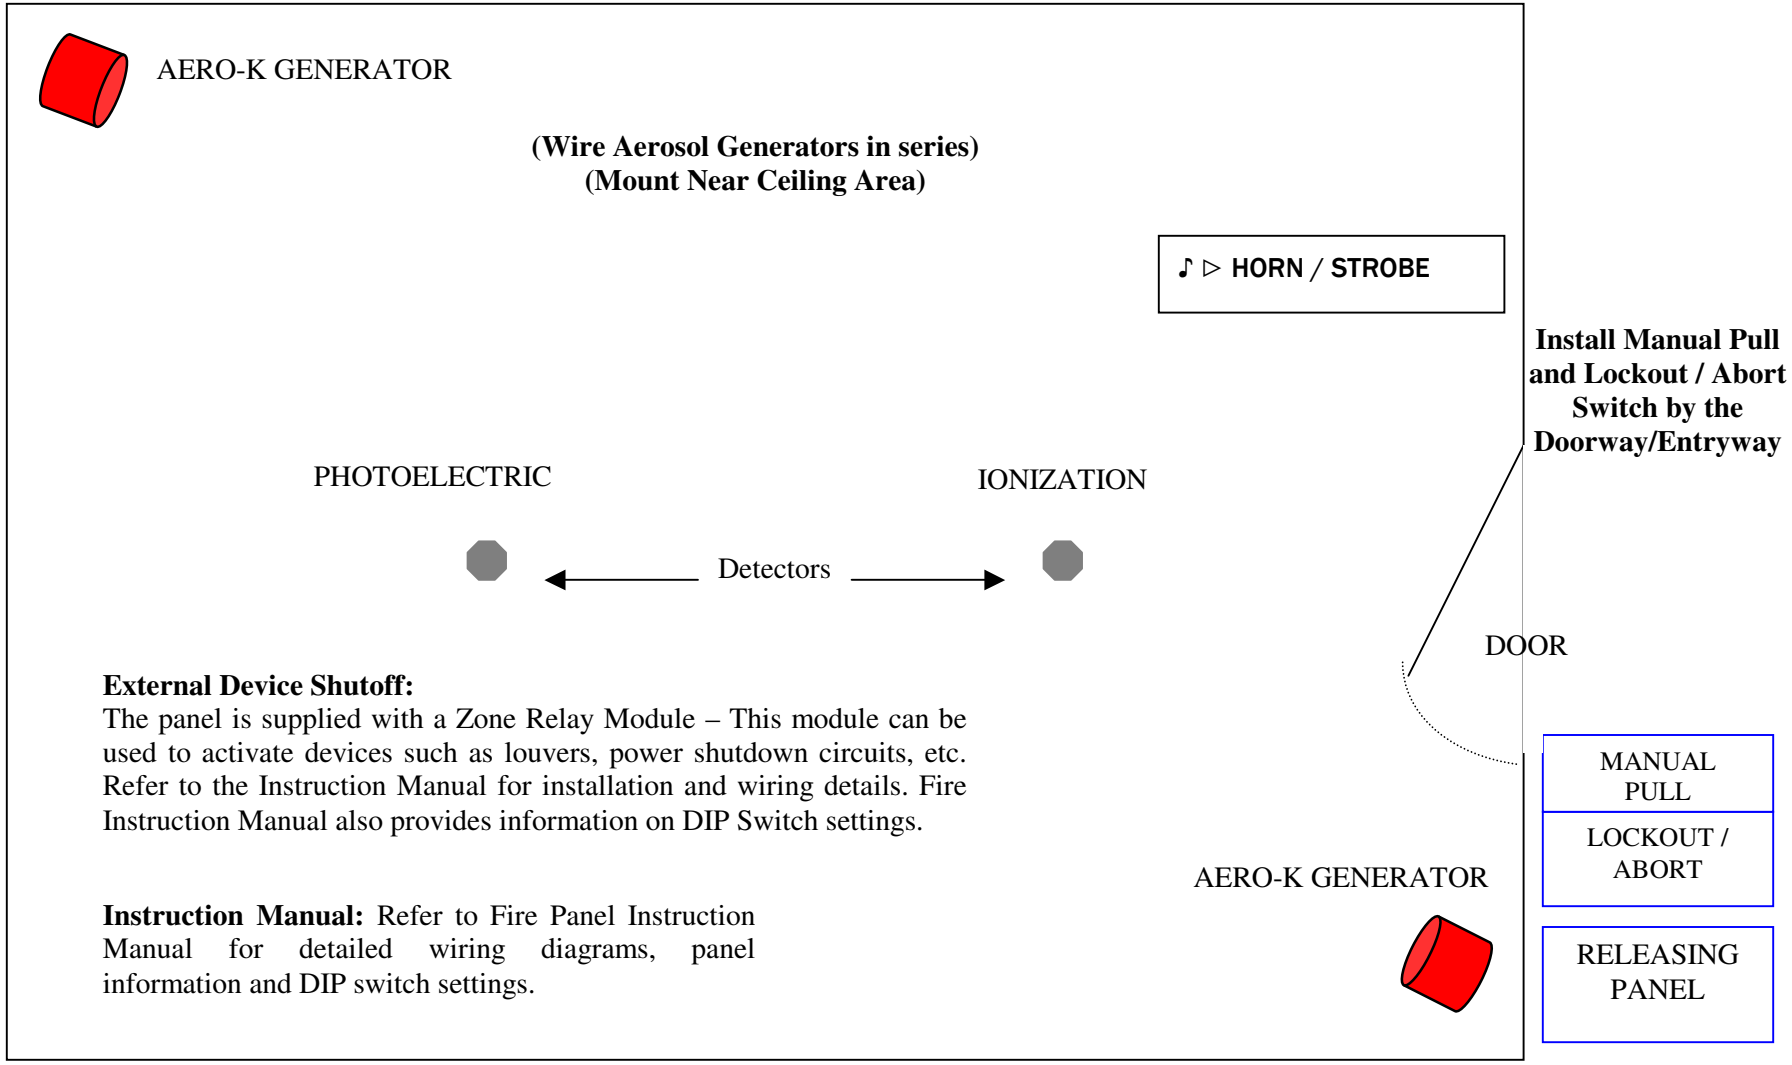

External Device Shutoff:
The panel is supplied with a Zone Relay Module – This module can be used to activate devices such as louvers, power shutdown circuits, etc. Refer to the Instruction Manual for installation and wiring details. Fire Instruction Manual also provides information on DIP Switch settings.

Instruction Manual: Refer to Fire Panel Instruction Manual for detailed wiring diagrams, panel information and DIP switch settings.